37 SERIESMarker Lamps



Part#	Description	EAN Code
37AM2P	Side Marker, Black Housing, Blister Pack	9335962011889
37RM2P	Rear Marker, Black Housing, Blister Pack	9335962011896
37WM2P	Front Marker, Black Housing, Blister Pack	9335962011902
37CAM2P	Side Marker, Chrome Housing, Blister Pack	9335962011926
37CRM2P	Rear Marker, Chrome Housing, Blister Pack	9335962011933
37CWM2P	Front Marker, Chrome Housing, Blister Pack	9335962011940

 Voltage
 12/24V

 Dimensions
 70 x 35 x 20mm

 IP rating
 IP67

IP ratingIP67Warranty5 Years

Cable 100mm (2P harness connectors)

Current draw (13.8V / 28V) 0.03A / 0.02A

ECE approval	Function Approva	
	Front Marker (R7)	A-E9-02.6918
	Side Marker (R91)	SM1-E9-00.1017
	Rear Marker (R7)	R1-E9-02.6917

Wiring colour codes BROWN: Power [+] WHITE: Earth [-]

Mounting instructions


▲ Installation to be undertaken by a competent professional

CLICK & STICK EASY MOUNTING SYSTEM

Ensure mounting surface is flat, clean and dry prior to installation.

- 1. Drill 2 x 6mm holes for the two plugs
- 2. Drill a minimum 8mm hole for the wire
- 3. Peel off the paper protector for the $3M^{TM}$ tape
- 4. Push lamp firmly into holes
- 5. The lamp is held in place by the plug serrations and the 3M[™] tape



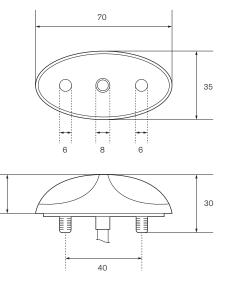

T: +44 (0)121 313 2222 **E:** sales@ledautolamps-uk.com

 $\textbf{LED Autolamps Europe LLP} \ \textbf{Unit 8J Maybrook Business Park, Minworth, Sutton Coldfield, B76 1AL, UK}$

37 SERIESFront/Rear Marker Lamps



Part# 37RWM 37CRWM 37RWMBKT	Description Front/Rear Marker, Black Housing, Blister Pack Front/Rear Marker, Black Housing, Blister Pack Black Pendant Mounting Bracket, Bulk Pack		EAN Code 9335962019632 9335962019625 9335962019649
Voltage Dimensions IP rating Warranty Cable Current draw (13.8V / 28V)	12/24V 70 x 35 x 20mm IP67 5 Years 400mm (stripped-end) 13.8V: 0.04A / 28V: 0.04A		
ECE approval	Function Front Marker (R7) Rear Marker (R7)	Approval# AM-E9-02.11984 RM1-E9-02.11983	
Wiring colour codes	BROWN: Power [+] WHITE: Earth [-]		
Mounting instructions	Installation to be undertaken by a competent professional CLICK & STICK EASY MOUNTING SYSTEM Ensure mounting surface is flat, clean and dry prior to installation. 1. Drill a 10mm hole for the cable and plug 2. Peel off paper protector for the 3M™ tape		

4. The lamp is held in place by the plug serrations and the 3M™ tape









37RWM

37CRWM

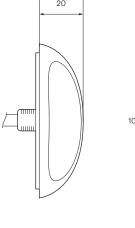

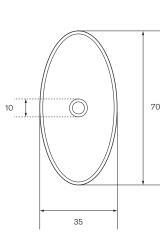

T: +44 (0)121 313 2222 **E:** sales@ledautolamps-uk.com

LED Autolamps Europe LLP Unit 8J Maybrook Business Park, Minworth, Sutton Coldfield, B76 1AL, UK

3. Push lamp firmly into hole